

SKELETONFX REPLACEMENT BLADE (FITS FX7870GE – FX7870BKE – FX7870RE) DLC TITANIUM TECHNOLOGY



Instructions for use

- Turn the trimmer to the OFF position and unplug it from the electrical outlet.
- Turn the trimmer upside down so that the teeth of the trimmer are facing down.
- Place the trimmer on a flat surface. Using the screwdriver, loosen the fastening screws from the blade set. Remove the blade set from the trimmer.
- To install or replace your trimmer blade set, reverse the procedure, aligning the blade cushion shaft into the moving blade cushion.
- With the blade held in place, replace blade screws and tighten loosely. Turn the trimmer over and align the blade set parallel to the trimmer's upper housing.



- **IMPORTANT NOTE :** To ensure maximum performance clean and lubricate this tool on a regular basis. Make sure to add a few drops of BaBylissPRO® lubricating oil before running.



FX707ZE

Barcode 3030050164336

BaBylissPRO
Artists

Innovative premium technology

www.babylisspro.com